

Installation Instruction for NEO Rubber Case

1. Installation

Step A: First remove battery cover and battery from Neo handheld for easier installation. Insert Neo handheld through the back opening of the Rubber Case, taking care not to damage the keys.



Step B: Slide the top end of the NEO handheld in the end of the Rubber Case,



Go to Next Step B

Go to Next Step C

Step D: Pull bottom of Rubber Case around the end of the NEO handheld until securely enclosed.



Go to Next Step D

Step C: Make sure scanner section is properly positioned then reinsert battery and battery cover.




2. Installation with Adaptor

Step E: Install Neo Rubber Case as per instructions A to C on previous page. Insert Adaptor in bottom end of Rubber Case.



Go to Next Step F

Step F: Firmly pull Adaptor in bottom of rubber case and line up with locating tab with matching slot on NEO handheld (under the battery latch).

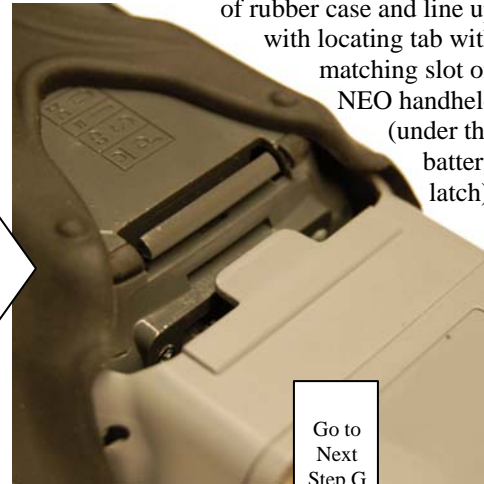

Go to Next Step G



Go to Next Step H

Step H: Make sure Adaptor has a secure connection and rubber case is properly seated.



Step G: Keeping Adaptor parallel with NEO handheld, engage connector.

COMPANY HEADQUARTERS AND CANADIAN SERVICE CENTRE

PSION Inc.
2100 Meadowvale Boulevard, Mississauga
Ontario, Canada L5N 7J9
Tel: +1 905 813 9900
Fax: +1 905 812 6300
E-mail: salescdn@psion.com
www.pSION.com
www.ingenuityworking.com